

FOXTROT



UNDERLAY

NATURAL FIBREBOARD UNDERLAY FOR WOODEN AND LAMINATE FLOORING



100% wood product without harmful additives
Produced according to BS EN 622-4




Environmentally friendly
Bio-degradable and ecologically harmless



Proven impact sound reduction $\Delta L_w = 19$ dB (BS EN ISO 140-8)

Impact sound reduction has been developed and proven in the sound-testing laboratory.

A reduction of only 10 dB halves the level of sound to the human ear.

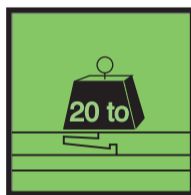


Compression resistance 20 tons/m² - Essential for quick lock laminates

Ensures an optimum life span for the sensitive quick lock connections. With softer underlays there is the risk of lifting of the joints and delamination of the surface laminate.




Drum sound improvement up to 15 dB

Displaces sound waves to the more agreeable low frequency range in your home.

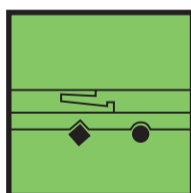


Levels uneven surfaces up to 3 mm

The high flexibility of wood fibres solves unevenness and other impurities in the surface finish - ideal for renovation and new build.

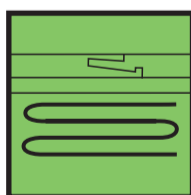


Suitable for underfloor heating

Can be used in combination with laminate flooring and hot water underfloor heating systems.

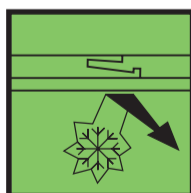

Insulates against cold floors


Improves the U Value in your flooring structure.

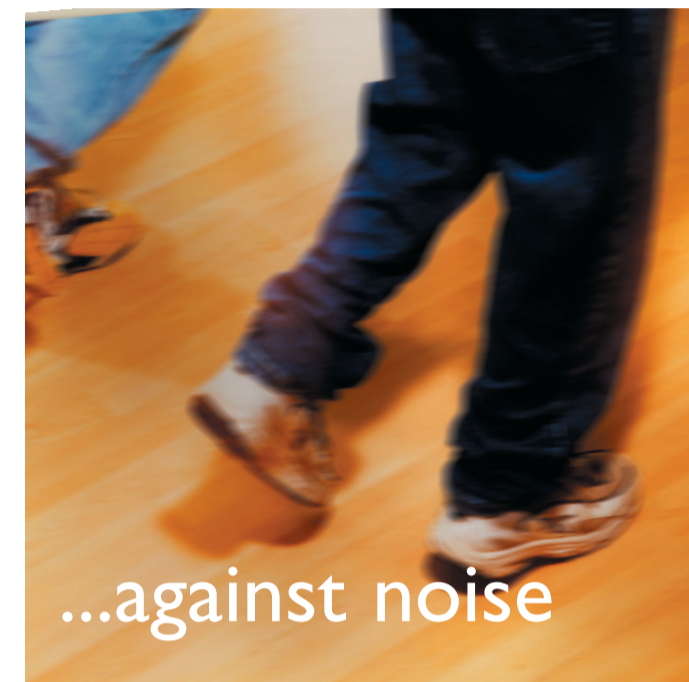

...against noise



...against cold

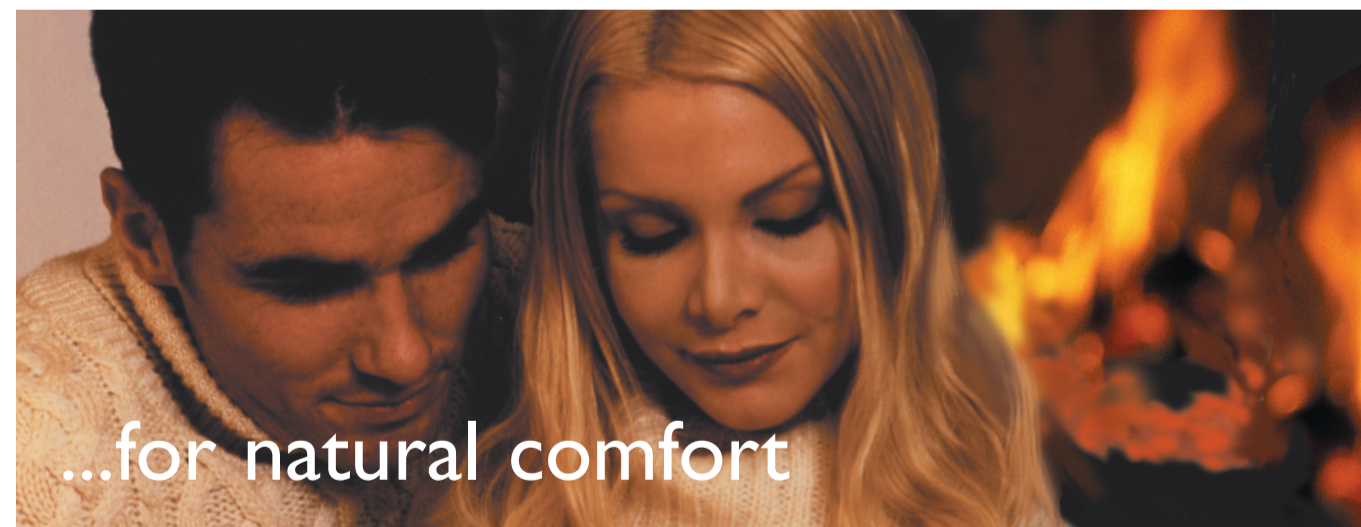

...for natural comfort

Installation instructions on the reverse



5 901115 1330059



80 %

Minimum

At least 80 % of the wood used in making this underlay comes from well-managed forests independently certified according to the rules of the Forest Stewardship Council.

Certified by SGS Qualifor SGS-COC-0570

FSC TRADEMARK © 1996 FOREST STEWARDSHIP COUNCIL A.C.

FOXTROT



Thickness : 5.5mm
Size : 1000 x 600 mm
Pack Content : 15 Pieces
Cover : ±9 m²
Weight: Approx. 13,5 Kg/Pack



ESTABLISHED 1971

PANEL AGENCY LIMITED

Maple House, 5 Over Minnis, New Ash Green, Longfield Kent DA3 8JA

Tel: (01474) 872578

Fax: (01474) 872426

sales@panelagency.com

www.panelagency.com

INSTALLATION INSTRUCTIONS:

1. The floor should be clean and dry before laying FOXTROT. Loose floorboards must be fixed and any protruding nails hammered down.
2. FOXTROT is a natural wood fibre product and must be conditioned for at least 24 hours in the room of installation.
3. A vapour barrier should be used when in contact with concrete or mineral based sub floors.
4. Cutting may be done with a sharp utility knife.
5. Leave an expansion gap of 10 mm around the perimeter of the floor and against any fixed objects.
6. Lay boards in "brick bond" pattern starting with a half board to ensure staggered joints. Do not fix to the sub floor. FOXTROT is to be left "floating".
7. Laminate flooring or parquet can be laid directly on FOXTROT. For other flooring types please refer to your supplier for advice.

